

CIBS HOME

Lip synchronized sound from your TV/home entertainment and wireless telephony!

CIBS HOME is a ready-paired set that is the optimal solution for the home situation for a person who is hard of hearing.

CIBS HOME set consists of an audio transmitter, called Audiostreamer and a receiver/communicator, called Maestro.


The Audiostreamer transfers all sound from your home entertainment such as TV, radio and MP3 player directly to the Maestro wireless via Bluetooth and produces very good sound quality, with no delay, directly to the hearing aid(s) / CI providing you have t-coil setting.

You can also connect an alerting system with line output to the Audiostreamer so that you will be automatically warned when the doorbell rings or the smoke alarm is set off. The signal from the alerting system always overrules the TV and telephone conversation, which increases safety in the home.

The Audiostreamer has an integrated charger cradle which makes it incredible easy to charge Maestro.

The volume is regulated on Maestro so that you only need to deal with one unit.

- Extraordinary long range with up to 70 meters
- Separate Speed-Dial button
- Bluetooth wireless and digital sound with A2DP Hi-Fi profile

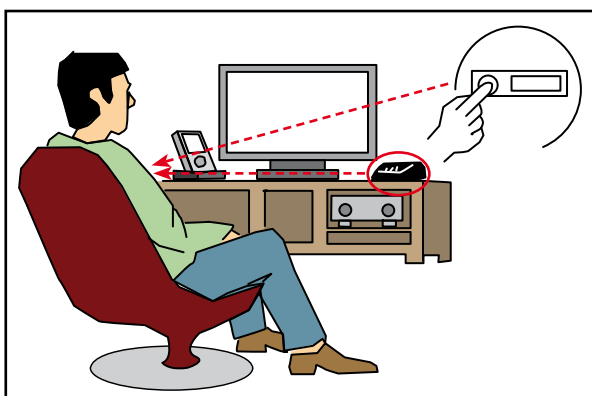

 Bluetooth®

The optimal solution for TV and Bluetooth telephony!

- Long range
- Lip synchronized sound quality
- Automatic sound prioritizing
- Active noise limitation
- Stepless volume control
- Unique battery capacity
- Rechargeable battery
- Eavesdrop secure
- Simple connection
- No channels (like FM)

Art.No: 108-161

COMMidt®

Maestro gives you the sound from the mobile phone and wireless listening to music. The integrated Speed-Dial button easily enables you to call a pre-programmed telephone number.

Maestro Communicator has a built-in speech amplifier, which is ideal for listening to conversation in noisy surroundings or wherever you need amplified sound. This functionality can easily be extended by using one of the wireless Bluetooth microphones Liberto or Allegro.

See the Maestro`s and the Audiostreamer`s own fact sheet for more information.

The set comes with:

- Audiostreamer with wall fittings and Maestro Communicator
- Headset (listen only), USB cable and clips
- International power connection
- 1 cable for connection to TV (Scart/phono), 1 cable for connection to radio (phono) , 1 cable for connection to MP3/CD player (3,5 mm Jack)

Accessories:

Product #	Product Name	Product Description
108-021	Allegro	Bluetooth microphone with push-to-talk button
108-031	Liberto	Bluetooth combined microphone with omni- and directional zoom functionality and with push-to-talk button
108-051	Mic. Controller	Controls up to two Liberto or Allegro mics. via Maestro
227-001	Tango VII	Amplifier with Bluetooth for desk telephones to be used with Maestro
957-001	Twin Charger Cradle	Double charger
901-001	External Clip-On Microphone 40 cm	2.5mm jack. Enables you to wear Maestro under clothing
902-001	External Clip-On Microphone 150 cm	2.5mm jack. For conversation use, e.g. in the car
907-001	12/24V Car Charger	To charge Maestro in the car
908-001	Audio Cable for TV/CD/MP3	Enables to listen to audio units without Bluetooth
915-001	Omni Directional Table Microphone	Corded microphone with battery. Inclusive adapter cable
914-002	Directional Microphone	Corded directional microphone
926-001	Scart/Phono Audio Cable	500 cm cable
530-001	Earbuds (Headset) with microphone	With 3.5 mm jack
521-002	Headset with microphone	With 3.5 mm jack
527-002	Headset (listen only)	With 3.5 mm jack
930-001	USB Cable	Charge and programme Maestro on the computer
955-002	International charger (mains power)	
935-001	Line cable for alerting system 3m	3,5mm jack.

Tech. info, Maestro

- Bluetooth 2.0
- BlueCore05 Multimedia Engine
- Headset, hands-free and A2DP (Hi-Fi) profile
- Talk time: up to 15 hours
- Standby time: > 500 hours
- Charging time: 1.5 hours
- Rechargeable battery
- Battery type: Li-Ion Polymer 3.7 volt
- Dimension: 64 (L) x 35 (W) x 17 (H) mm (2,5 (L) x 1,4 (W) x 0,7 (H) inch.)
- Weight: approx. 40 grams (approx. 1,4 ounces)
- Headset jack
- Simple unit pairing

Tech. info, Audiostreamer

- Bluetooth 2.0
- Class 1 device
- 3 sound inputs (phono)
- 1 sound input (3,5mm jack)
- 1 prioritized alarm input (3,5mm jack)
- Dimension: 120 (W) x 90 (D) x 38 (H)mm (4,7 (W) x 3,5 (D) x 1,5 (H)inch)